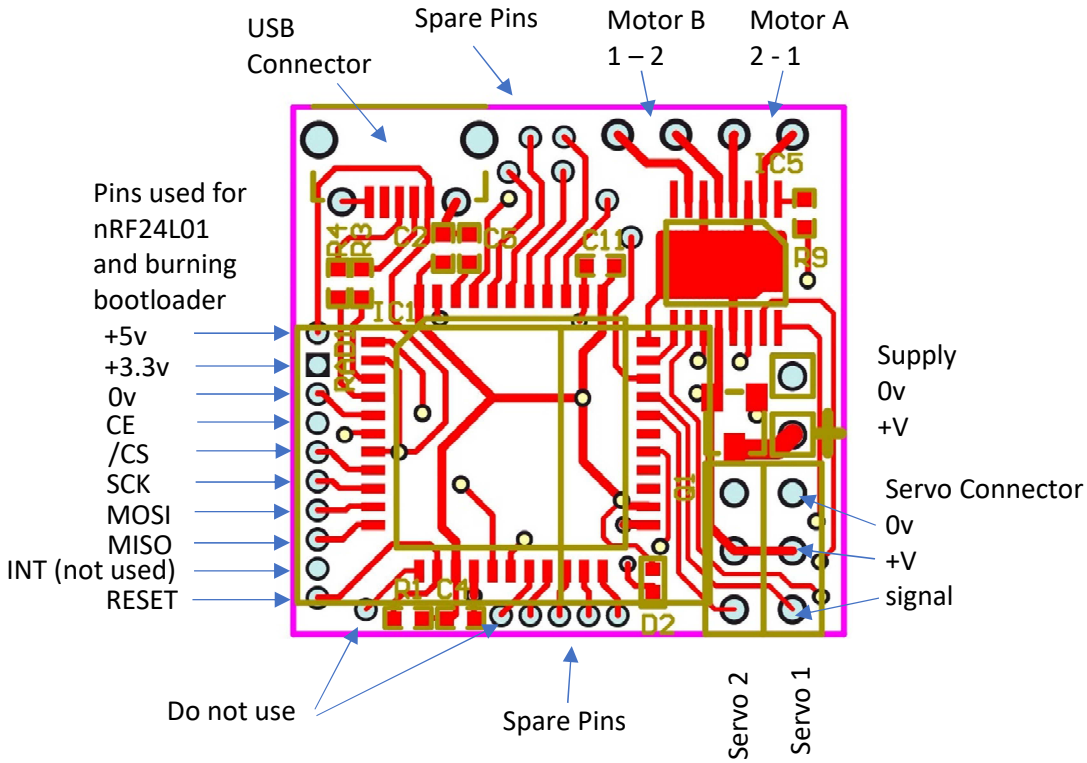
AW32u4 v4


USB
Connector
Spare Pins
Motor B
1 – 2
Motor A
2 - 1
Pins used for
nRF24L01
and burning
bootloader
+5v
+3.3v
0v
CE
/CS
SCK
MOSI
MISO
INT (not used)
RESET
Supply
0v
+V
Servo Connector
0v
+V
signal
Do not use
Spare Pins
Servo 2
Servo 1
IC5
C2
C5
C11
R9
IC1
D2